

- User selectable window text
- Two warning levels
- Clear indication of increasing hazard
- Slave relays for further operations
- Robust and weatherproof



## Door Entry Status Indicator Panel

The Status Indicator is a remote module lending itself to a wide variety of warning and alarm applications. The module provides two user selectable levels of alarm, each having varying audible tones with 'text selectable' illuminated window indications. The sounder may be muted at any time with the flashing LED indicators going constant but remaining lit until the alarm condition has cleared. Three relays are available for further repeater or control actions, these relays may be selected to reset with the sounder or remain on with the indicators.

### Power Supply

10~30vDC 24v nominal  
 Optional 115/230v AC (Deep box – D)  
 Power – full alarm 120mA @24vDC  
 Quiescent – 10mA

### Alarm Signal

5 to 30v + DC

### Inputs

4 inputs – 3 alarms and fault

### Indicators

Long Life High Power LED's

#### Normal

Two Green LEDs – ON (bottom window)  
 turning off with any alarm  
 Option – permanently OFF

#### Alarm 1

Single Red LED flashing (bottom window)  
 Green LEDs – OFF  
 Sounder – intermittent

#### Alarm 2

5 Red LEDs flashing (top window)  
 Sounder – constant

#### Fault indicator

2 Amber LEDs (bottom window)  
 Sounder – slow intermittent

### Sounder Output

87dBs @ 1 metre  
 Mutable or permanent isolate option

### 3 Relay Outputs

Volt free – SPCO 3A/230vAC  
 Link option for reset or latched

### Other

Instruction sheet C1285  
 Remote reset/mute contacts – N/O  
 Sounder automatic 10 minute time out  
 following each new event  
 Manual test – indicators, sounder & relays  
 Weight 0.45kg




### Enclosure

ABS flame retardant FR40  
 Lid Screws M4–SS  
 Protection – IP64 (weather proof)  
 Finish – Signal White RAL 9003  
 Entries – Rear 5–20mm Ø 2 slot knock-outs,  
 Base – 20mm plug, sides, top, not specified

### Mounting

Stand offs – M4 or No.8 screws  
 Drill at (C) when stand offs removed  
 Conduit box – drill at (A) 4.5mm  
 Surface mount box – drill at (B) 4.5mm

# Door Entry Status Indicator Panel

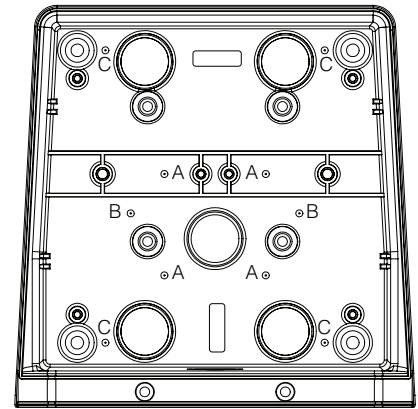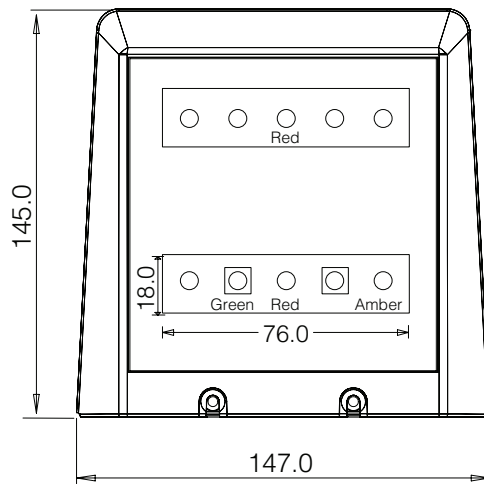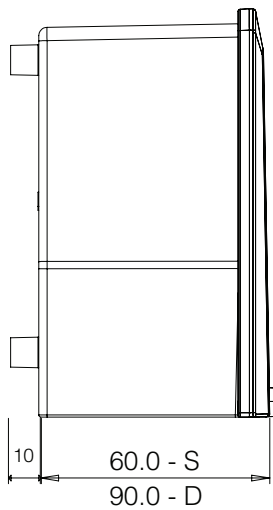

Cover Lid Removed

## Window Text


Standard selection/customised/foreign C1263

	<b>ALERT</b>	
	<b>CAUTION</b>	
	<b>STANDBY</b>	
	<b>LOW ALARM</b>	
<b>FAULT</b>	<b>LOW ALARM</b>	<b>FAULT</b>
<b>SAFE</b>	<b>LOW ALARM</b>	<b>SAFE</b>

<b>NORMAL</b>
<b>DO NOT ENTER</b>
<b>DANGER</b>
<b>CAUTION GAS</b>
<b>SAFE</b>
<b>DANGER GAS</b>

<b>SAFE</b>
<b>OVER RANGE GAS ALARM</b>
<b>HIGH GAS ALARM</b>
<b>LOW GAS ALARM</b>
<b>LOW OXYGEN</b>
<b>HAZARD</b>
<b>WARNING</b>

<b>WATER INGRESS</b>
<b>LOW ALARM</b>
<b>HIGH ALARM</b>
<b>HIGH TEMPERATURE</b>
<b>LOW TEMPERATURE</b>
<b>HIGH PRESSURE</b>
<b>LOW PRESSURE</b>

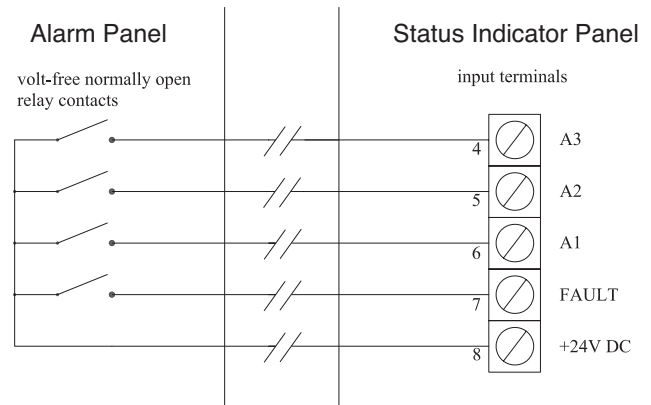

Status inputs may be cross connected or ganged together as required typically 4, 5 & 6.

