
Protec

Product Leaflet


6000PLUS BASE
6000PLUS FFBASE

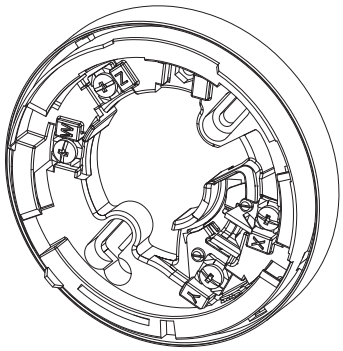

The 6000PLUS BASE and FFBASE allow an engineer to quickly install Protec 6000PLUS devices as part of a fire detection system. This document provides the basic wiring details and installation parameters of both of these products.

6000PLUS/BASE and 6000PLUS/FFBASE Wiring

Figure 1

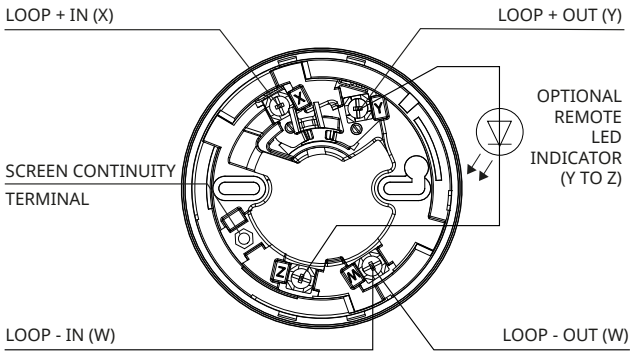


The 6000PLUS BASE must be mounted in compliance with BS5839 and as part of a BS5839 conforming fire detection system design. Bases and wiring should be installed by a trained professional.

The bases and relevant detectors must be mounted on a stable, level surface that is not subject to vibration which can sufficiently support its weight and accommodate the necessary fixing hardware. The fixing hardware and location must be appropriate for the wall construction.

FFBASE Installation

Top Cable Entry


Figure 2

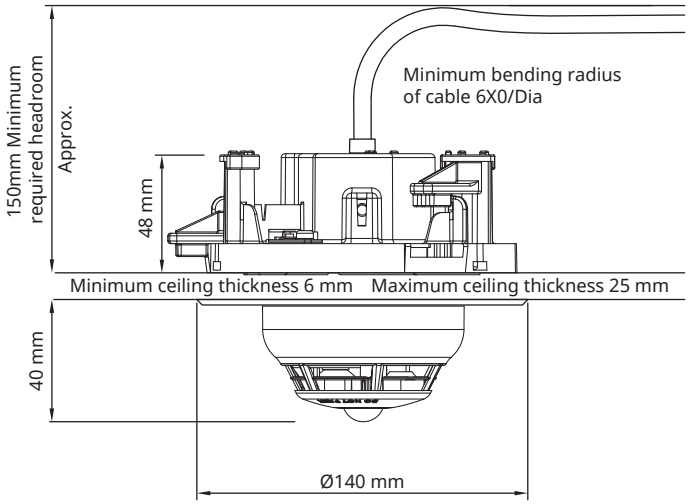

Dimensions for minimum headroom are for when using 2-core 1.5 mm enhanced cable.

Side Cable Entry

Figure 3

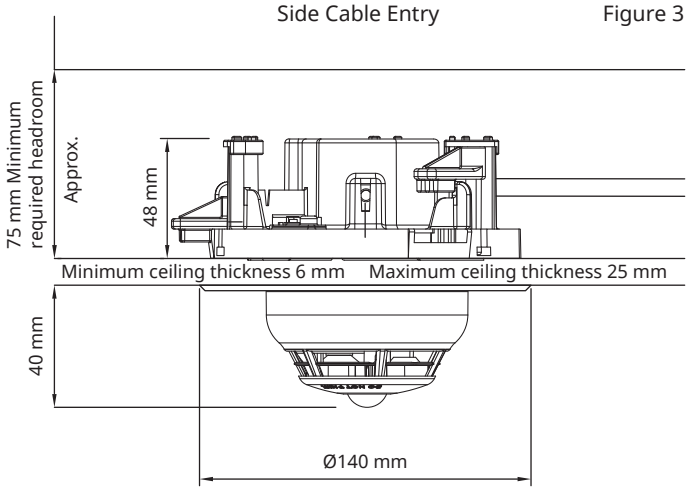

For fibre-board ceiling tiles or similar, an additional rigid backplate may be required behind the ceiling tile.

Megger® is a registered trademark.

Refer to DEL2207 Safety and Regulatory Information (6000 Devices)

Protec Fire Detection PLC
Protec House, Churchill Way
Nelson, Lancashire
BB9 6RT, United Kingdom

This document must be read in accordance with the Product Documentation Disclaimer available at protec.co.uk/terms.

19/03/2025 DEL2220 Issue 0

All rights reserved © 2025 Protec Fire Detection PLC

22 PAP A5